

Direct String Connection Kit

Direct connection of up to 18 strings to one inverter.



Installation Manual

Safe. Flexible. Precise.

Designed for a DC system voltage of up to 1500 V

Direct connection of up to 18 strings to the inverter

Solution for the inverter series blueplanet 87.0 TL3 XL - 165 TL3 XL

Use of the XL version of the inverters with integrated DC-switch

Fuse sizes 15 A / 20 A / 25 A / 30 A

Connection of PV strings via MC4-EVO2 connectors

In cooperation with

HIS
we connect solar energy



Installation Manual



1.



2.



3.



4.



5.



6.



7.




8.



9.1



9.2

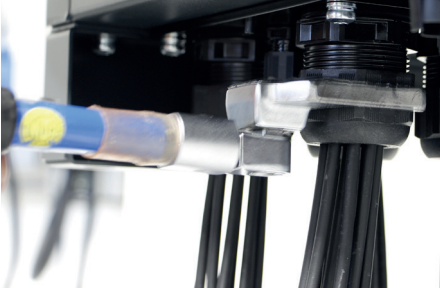


10.



11.



12.

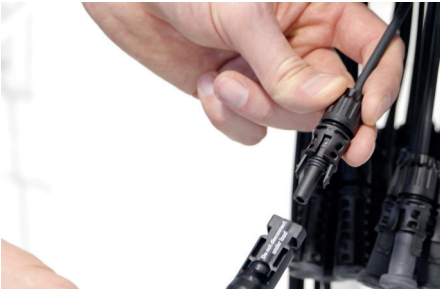

13.

1.	I.) Set DC disconnecter from 1 On to 0 Off II.) Remove the screws [T_25] III.) Remove the inverter housing cover
2.	I.) Remove the screws of the DC input plate [T_30] II.) Remove DC input plate Be careful not to damage the seal!
3.	- Loosen and remove cable fittings M40
4.	- Remove the lock nuts of the cable fittings
5.	- Insert the cable string bundles into the DC input plate Ensure correct polarity!
6.	- Tighten the cable fittings with a suitable torque wrench and the appropriate turning moment 10 Nm (max. 20 Nm) (see installation leaflet of the DSCK*)
7.	- Position the DC input plate and tighten the screws with the correct turning moment [T_30 / 6 Nm]
8.	- Connect the cable lugs to the internal DC switch (see inverter manual)
9.1/9.2	- Tighten the screws with the correct turning moment [W_17 / 30 Nm]
10.	- Tighten the cap nut with a suitable torque wrench and the appropriate turning moment 10 Nm (max. 20 Nm) (see installation leaflet of the DSCK*)
11.	I.) Refit inverter housing cover II.) Tighten enclosure cover screws with correct turning moment [T_25 / 4,8 Nm]
12.	- Remove the dust protection caps of the DC connectors for the number of strings to be connected
13.	- Connect the DC inline fuses to the DC connectors.

The safety instructions and warnings contained in the manual also apply to the installation of the DSCK*.

*Direct String Connection Kit

Installation tool

Code (s)	Shape of connector
✕ W	External hexagon
✕ A	Internal hexagon
✕ T	Torx
✕ S	Slot

